

User Operations and Maintenance Manual

Version 1.0

- POWER
- APPLIANCE SUPPLY ON
- FIRE DETECTED
- SENSOR TEMP HIGH
- GAS DETECTED
- SERVICE REQUIRED

# **FAULT MONITOR**

- LOW CYLINDER PRESSURE
- SENSOR FAULT







The specifications and availability of this manual are subject to change without notice. © 2015 Copyright by Flamefast Fire Systems Ltd

Reproducing, transmitting or editing of this document along with the use of its content, without express authorization is prohibited.

# Contents

About this manual	4
Objective	4
Intended Groups	4
Safety Information	5
Symbols & Signal Words	5
Safety Instructions	6
Product Over view	7
Components	7
Interface Indicators & Controls	8
User Required Maintenance	9
Daily Checks & Weekly Checks	9
Troubleshooting Guide	10
Contact Details	 11

# **About this manual**

# **Objective**

This manual includes all required information for user maintenance and operation of the Flamefast Kitchensafe system. Following this manual will ensure proper operation and safety of personnel.

# **Intended Groups**

User personnel:

- Must carry out all user required checks.
- Must conduct all user required maintenance.
- Should recognize fire and fault conditions.
- Should be aware of system function and troubleshooting methods.

# **Safety Information**

It is mandatory that all safety notices are followed in order to protect people and property. Notices appear as symbols and signal words which express the nature of danger, consequences and how to avoid.

#### **Symbols** Signal Words



DANGER – Highlights a dangerous situation with fatal or injurious consequences



WARNING - Highlights a dangerous situation, with the possibility of injury or fatality



**General Danger** 

CAUTION – Highlights a dangerous situation, with the possibility of injury



Fire Hazard

NOTICE – Highlights a situation which could lead to property damage.



#### WARNING

#### Electrical voltage

Electrical Shock

All work on electrical circuits should only be conducted by qualified persons or those under supervision and instruction from a qualified person.





#### WARNING

#### **Improper System Configuration**

Adjustment of any Kitchensafe system and associated wiring must be carried out by qualified personnel only, who hold a valid training certificate from the manufacturer.

# **Safety Instructions**

- Never cover the sensor as this severely reduces the system's ability to recognize fire conditions.
- Never leave cooking unattended.
- Never use flambé style cooking.
- Never leave any ring of the cooker on without a filled pan covering it.
- Never put hot items underneath the sensor.
- Never use any other kind of cooking equipment on top of the cook range.
- Never try to access inside the control unit.





#### WARNING

#### Disregarding the above

**Electrical Shock** 

Accessing inside the control unit may result in an electrical shock





#### **WARNING**

#### Disregarding the above

Doing any of the above may severely compromise the system's ability to fight a fire.





#### Notice


#### Disregarding the above

Disregarding any of the above may lead to damage to the system or other kitchen appliances.

# **Product Over view**

This section presents the system components and interface functions. Familiarize yourself with these before using the system or attempting any maintenance.

# **Components**

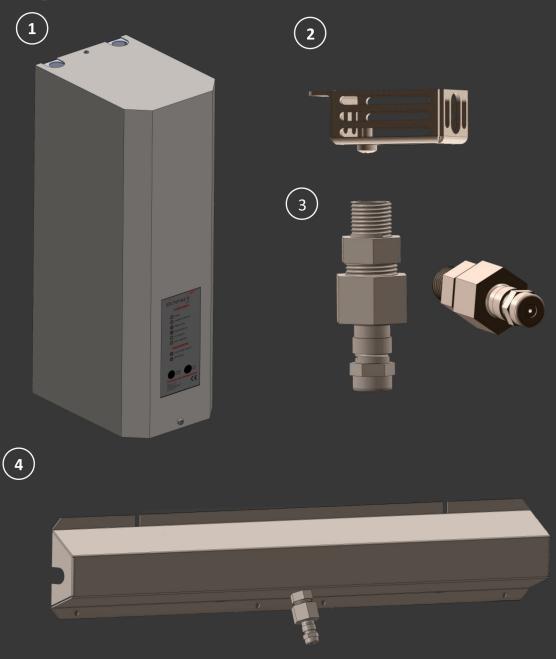

- 1. Control Unit
- 2. Sensor
- \*Illustrations are not to scale

- 3. Nozzle
- 4. Manifold Assembly

# **Interface Indicators & Controls**



POWER	When illuminated, indicates the system is on.
APPLIANCE SUPPLY ON	When illuminated, the hob will have power.
FIRE DETECTED	When illuminated, the system will discharge and this light will stay on until the system is reset.
SENSOR TEMP HIGH	When Illuminated, indicates that the system is nearing its activation point. If this light is on, turn off any heat source in the cooker area.
GAS DETECTED	When Illuminated, the system is connected to a gas detection device and the unit has detected the carbon monoxide level in the room is high. The Kitchensafe will shut off the gas supply.
SERVICE REQUIRED	When illuminated, the system requires an engineers attention.
LOW CYLINDER PRESSURE	When Illuminated the system Requires an engineers attention.
SENSOR FAULT	When illuminated, the system requires an engineers attention.

All faults, fire conditions and service reminders are accompanied by an audible buzzer.



Use this button to silence the audible buzzer.


LED **TEST** 

Use this button to test the function of the LED indicators.

# **User Required Maintenance**

# **Daily Checks**

## **Weekly Checks**

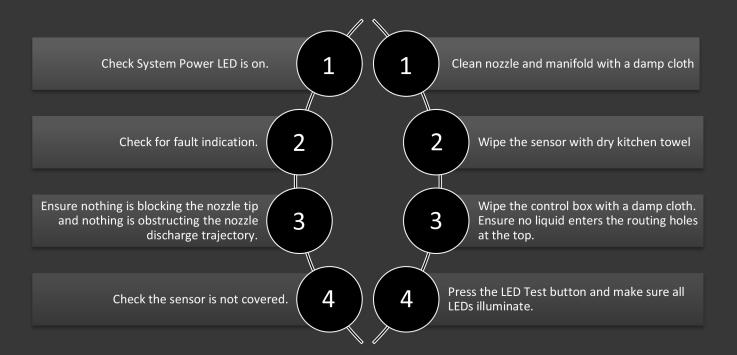






### Notice

#### **Unwanted Activation**

Damage to system or surrounding

Never use hash chemicals or water to clean the sensor as this can cause damage to the system and possible unwanted activation.

# **Troubleshooting Guide**

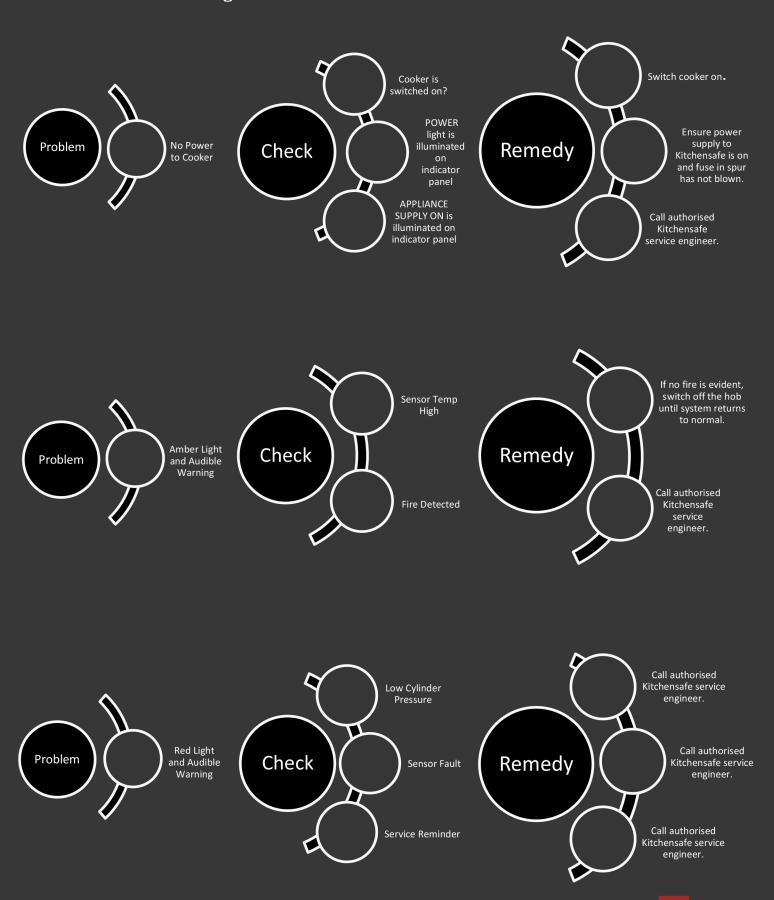

# **Contact Details**

Flamefast Fire Systems LTD.

Unit 9

**Brunel Close** 

Park Farm

Wellingborough

NN8 6QX

Tel. +441933 420 733